


PREMIERE CHROME LAZY SUSANS INSTALLATION INSTRUCTIONS

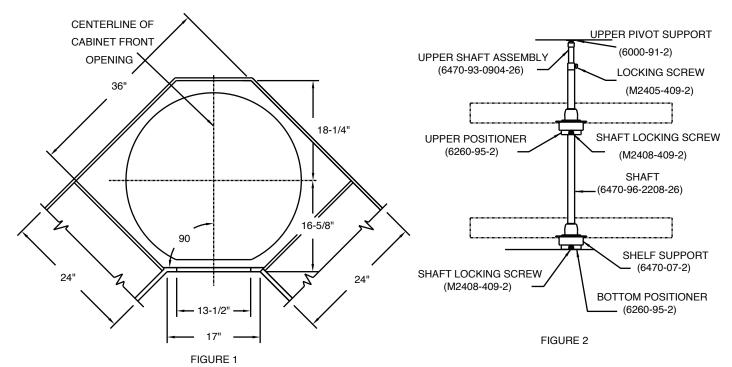

- 1. The dimensions shown in Figure 1, are minimum. Shelves must be installed from back or top of cabinet.
- 2. Square from the front edge of the cabinet and pencil a centerline from front to back. Measure from the front 16-5/8" and mark the center of the tray assembly. Use a square to extend lines out from the center about 6" each direction. See Figure 1.
- 3. Place the bottom positioner (P/N 6260-95-2) over the centerlines with the locking screw facing to the front and mark the holes. Use a 1/8" max. drill to make pilot holes for (4) 3/4 x #8 oval hd. screws (P/N F1208-13-2). Install the positioner.
- 4. Repeat Steps (2) and (3) for the top support (P/N 6000-91-2). It may be necessary to install a board, front to back, for this purpose.
- 5. With bottom and upper pivot supports installed, begin assembling the shelves and the main shaft. Working from bottom up, inside the cabinet space, slide the upper shelf onto the shaft. Slide the upper positioner onto the shaft and temporarily tighten the screw with the positioner approximately 15" from the bottom of the shaft. Slide the bottom shelf onto the shaft.
- 6. Insert the upper shaft assembly into the top end of the shaft. Loosely install the lock screw. Insert the shaft/tray assembly into the bottom positioner. Extend the upper shaft assembly to engage the upper pivot support (See Figure 2).
- 7. Adjust the upper shelf position by grasping and supporting the upper shelf positioner assembly while loosening the locking screw. Rotate the positioner and shelf into alignment and securely tighten the locking screw.

12400 Earl Jones Wav Louisville, KY 40299 800-626-1126 rev-a-shelf.com