

Congratulations!

You have purchased the finest carousel product available, the **Lazy Daisy® Susan**. For any questions or further information, please contact us at:



LAZY DAISY®
BY **REV-A-SHELF®**

12400 Earl Jones Way • Louisville, KY 40299
www.rev-a-shelf.com • 1-800-626-1126

System 9 24" Pie-cut - TELESCOPIC TUBE

Doors revolving
90 degree corner

Installation instructions for:
Article # LD-60-91TE-8 (white) / LD-60-92TE-8 (almond)

Base Cabinet
28" x 28"
72 x 72 cm

Tray diameter: 24" (60 cm)

Mounting height: 26" - 31"
(66cm - 79cm)

Minimum cabinet dimensions:

USA : 28"

EURO : 72 cm

a = 28"


a = 72 cm

b = 18"

b = 47 cm

c = 10"


c = 25 cm

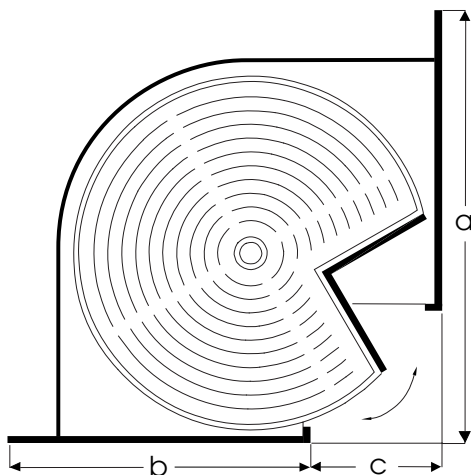

System 9

Pie-cut

Doors revolving
90 degree corner

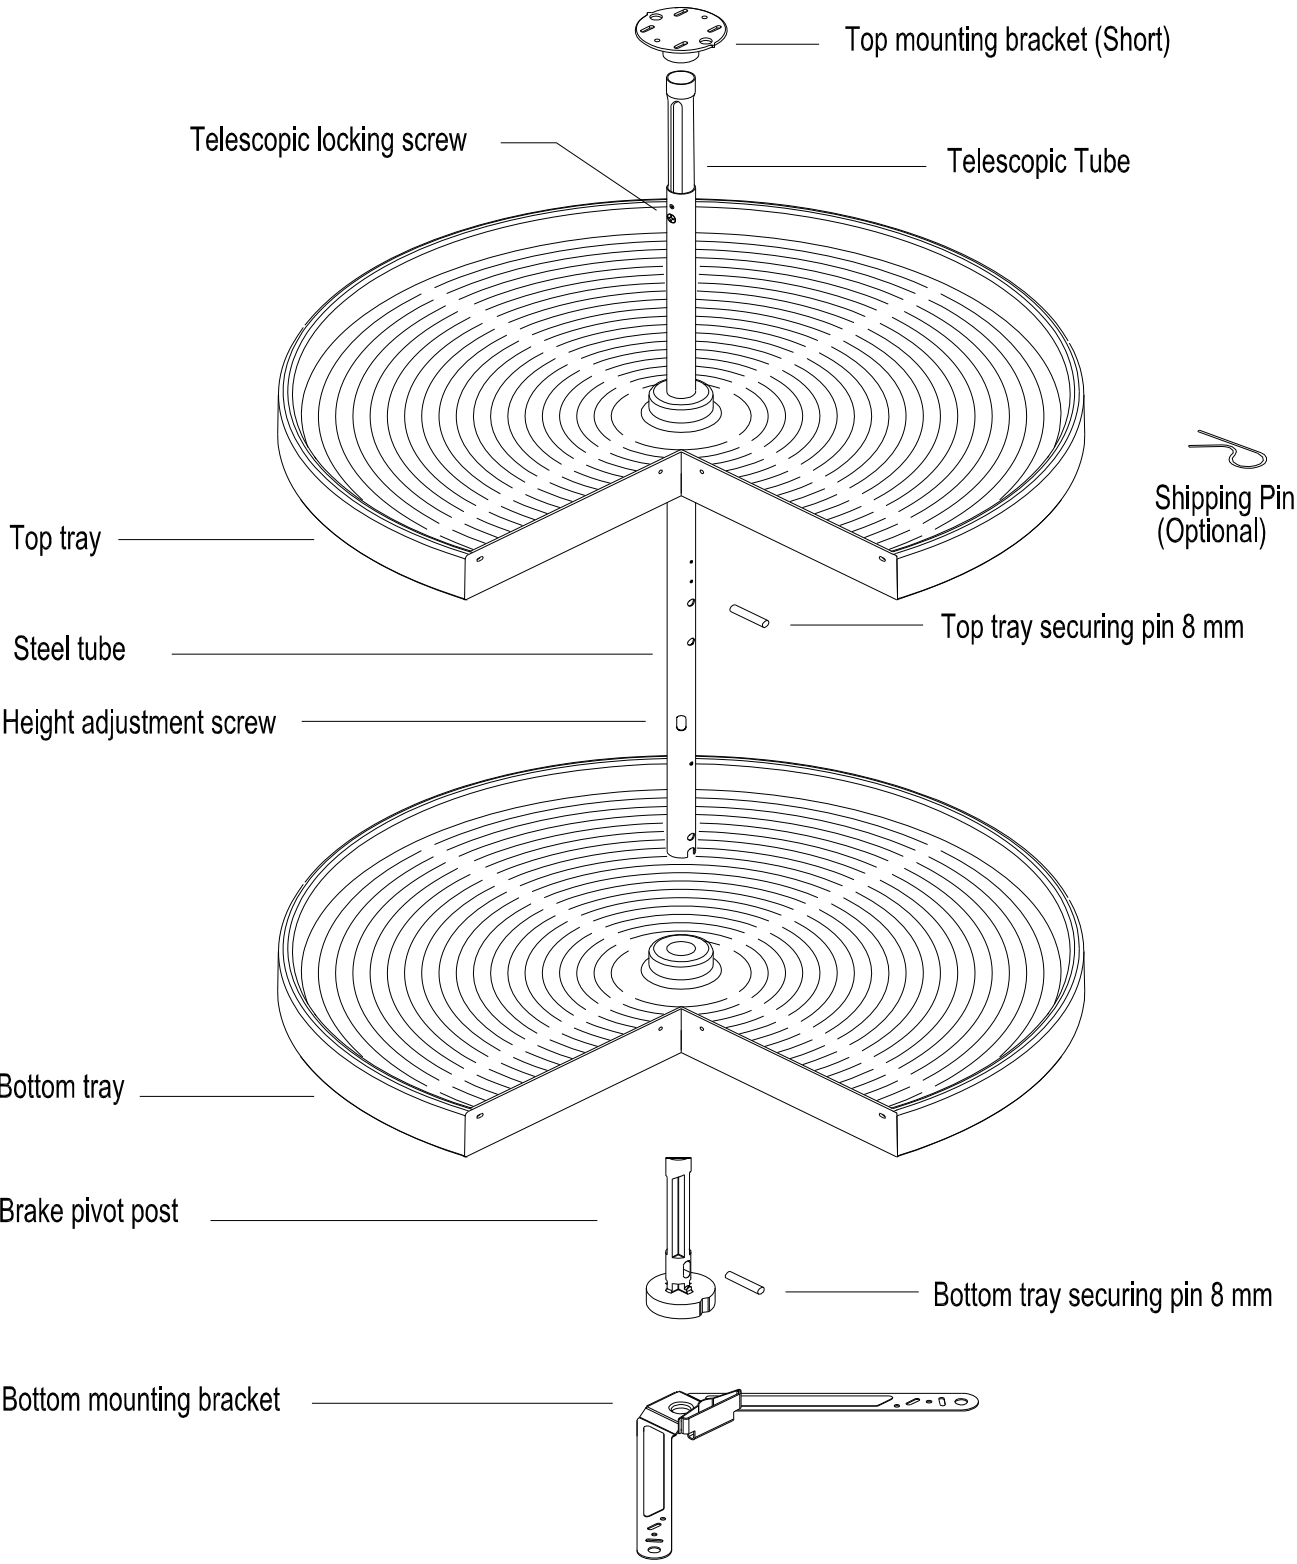

System 9

Pie-cut

Doors revolving
90-degree corner

Mounting Instructions

1. Mount **bottom mounting bracket** to base of cabinet using template provided.
2. Drill pilot holes for **top mounting bracket** using template provided. Install the **top mounting bracket**.
3. Insert the **tube** through both trays inserting the bottom of the tube through the top of both trays. (Do not install securing pin.)
4. Insert **brake pivot post** into bottom of the tube. (Notch on post should fit into the half hole on the bottom of the tube.)
5. Insert **bottom tray securing pin** through tube and post assembly. Secure bottom tray onto pin. The 90-degree cutout of the tray should face the same way as the notch on the **brake pivot post** (see drawing).
6. Insert the assembly into the cabinet with the trays collapsed and the tube in the lower position. The brake pivot post fits into the center hole of the bottom mounting bracket, and some pressure is needed to pull it straight.
7. Raise the **telescopic tube** up into the top mounting bracket and tighten locking screw.
8. Raise the upper **tray** into position and insert securing pin into the tube and snap on the tray. (Leave a small gap for adjustment.)
9. Adjust **height adjustment screw**, so that the tube assembly is raised approximately 3 mm off the **brake pivot post**. (This is to make sure that both downward [2-3 mm] and upward [7-8 mm] adjustments will be possible once the doors are attached).

Check rotation and stopping position before mounting doors.

10. Affix doors to trays by centering from top to bottom with cabinet opening. See next page for door installation.

System 9

Pie-cut

Doors revolving
90-degree corner

Door Adjustment

1. Door alignment

- Open doors so that one side of the bottom mounting bracket can be seen. With a pencil, mark the original position of the bottom mounting bracket. Insert a screw into the large hole on the end of the bracket (When inserting the screw, place it off-center in the direction of desired adjustment). Take out the original fixing screw. Repeat on the other side.
- Loosen the screws over the large holes and carefully rotate the bracket to the left or to the right, depending on which way the doors need to go.
- Tighten the screws and close doors to check alignment.
- Once door alignment is complete, reinsert fixing screws into one of the small holes.

2. Height adjustment

- *** Shipping pin must be removed** before attempting height adjustment.
- Rotate doors to the right, exposing the height adjustment screw on the tube between the top and bottom trays.
- Turn screw to the right to raise the doors, and to the left to lower the doors.
- **TRAYS DO NOT NEED TO BE UNLOADED TO ADJUST HEIGHT (UP TO 120 LBS.)**


* Tools required - Phillips screwdriver




ADJUSTMENT INSTRUCTIONS

LD-PM LAZY DAISY


TO ADJUST DOOR HEIGHT

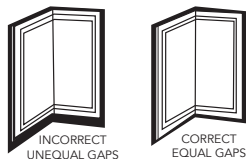

1. To adjust the door height, grasp the top portion of telescopic tube, loosen telescopic locking screw and lower top portion of telescopic tube approximately 1/8" to ensure height adjustment clearance. Re-tighten the telescopic locking screw.

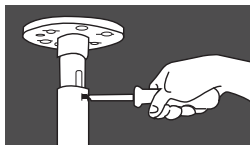

2. Rotate the doors to the right, exposing the height adjustment screw.

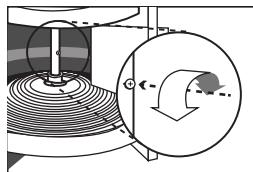

3. Turn the screw to the right to raise the doors and turn to the left to lower the doors.


*Trays do not need to be unloaded to adjust (Up to 100 lbs.).

12400 Earl Jones Way
Louisville, KY 40299
rev-a-shelf.com
Customer Service: 800-626-1126





VIDEO INSTRUCTIONS: WWW.REV-A-SHELF.COM/VIDEOS

TO ADJUST DOOR CLOSING ALIGNMENT

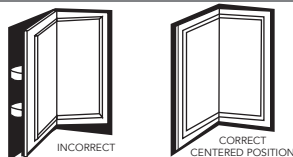


1. Open the doors so that one side of the bottom mounting bracket can be seen.
2. Remove the shipping screw and loosen the star-washer screw. If the door is out of alignment to the left, insert shipping screw into the right side of the slot. Reverse if alignment is out to the right. Repeat on both sides of bottom mounting bracket.

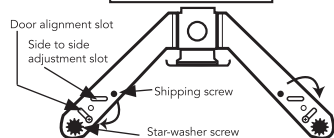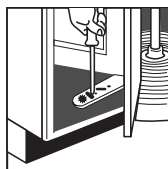


3. Rotate bracket to the left or right depending on which way the doors should go.
4. Tighten the door alignment screws and close the door to check alignment. Repeat if necessary.

TO ADJUST FOR SIDE/SIDE CLEARANCE

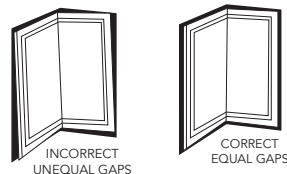


1. Remove the shipping screws then loosen the front and back star-washers.

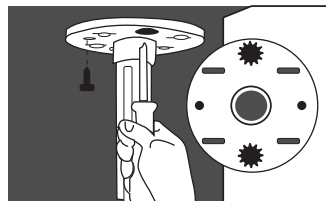

2. Adjust the mounting bracket to correct the gap between the sides of the door and frame at the top and then the bottom.

3. Tighten, check, and repeat if necessary. For top adjustment, re-insert shipping screw in any unused hole or slot.

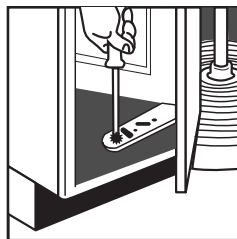

REMOVAL OF THE LAZY DAISY SUSAN UNIT

1. Detach doors from both the top and bottom trays then remove the shipping pin from above the top tray.
2. Lift bottom tray and remove bottom tray securing pin then lift top tray and remove top tray securing pin.
3. Loosen telescopic locking screw and lower upper portion of telescopic tube.
4. Lift both trays to the middle of the cabinet.
5. Tilt bottom of the tube and remove brake pivot post.
6. Rotate trays so the complete unit can be removed from cabinet then remove trays from tube.
7. Remove top and bottom mounting brackets.

