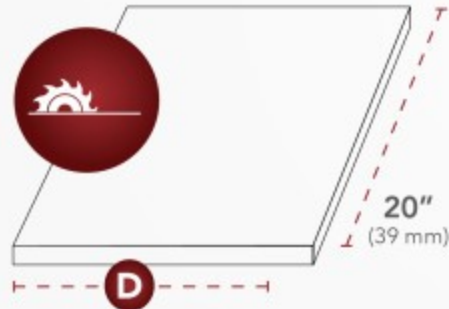
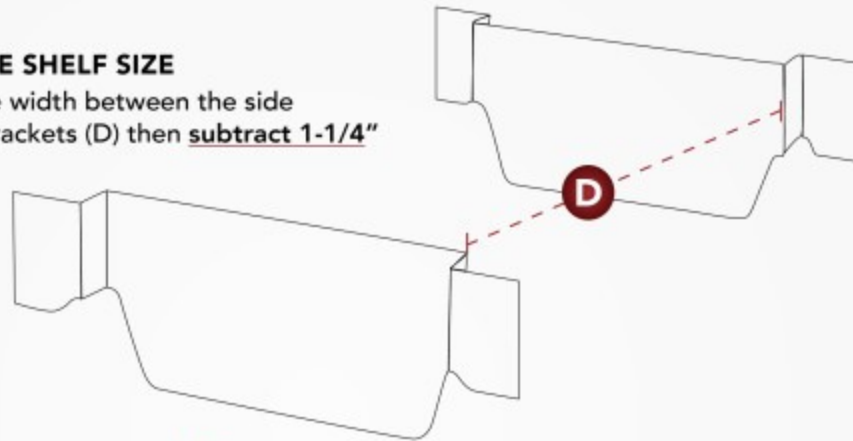


SHELF NOT INCLUDED

CUT AND CUSTOMIZE YOUR SHELF USING THE FOLLOWING INSTRUCTIONS:

1 DETERMINE SHELF SIZE

Measure the width between the side mounting brackets (D) then subtract 1-1/4"

**2 CHOOSE SUBSTRATE AND CUT TO SIZE**

Cut substrate (minimum thickness should be no less than 3/4") using the number from step one (D) as your width and a 20" depth.

3 INSTALL ONTO MOUNTING PLATES

Mark, pre-drill, then mount using (6) #10 x 1/2" (12MM) pan head wood screws.

SPECIFICATIONS