

MINIMUM CABINET OPENING (MCO)

FRAMED VS. FRAMELESS






WIDTH


DEPTH

(1) HEIGHT

1-1/2"

PLEASE NOTE! When measuring, check for obstructions such as door hinges or plumbing

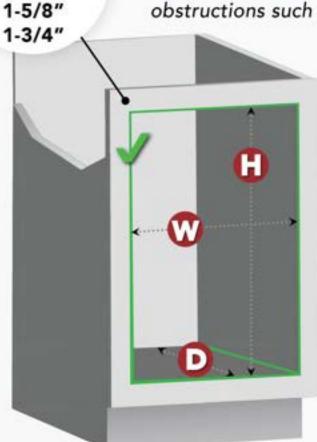

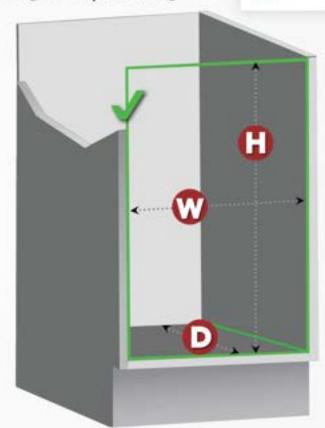

FRAMED

Traditional style common in the USA



FRAMELESS

(Full-Access) European inspired design

HOW TO MEASURE