



Tandem Bottom Mount Waste Pullout

Refer to the enclosed instruction sheet for installation information.
If you have any questions please contact our customer service department at

1-800-626-1126

Form TWCSC-0512



Tandem Bottom Mount Waste Pullout

Refer to the enclosed instruction sheet for installation information.
If you have any questions please contact our customer service department at

1-800-626-1126

Form TWCSC-0512

Do not cut the template for use in an 18" wide cabinet opening

Cut on this line for use in a 15" wide cabinet opening

Cut on this line for use in a 12" wide cabinet opening


TANDEMBOX

Waste/recycle set

Installation


Step 1 — Prepare template

Remove template from box and read all instructions carefully. For 12" or 15" sets, cut off left side of template on the line marked for your set.

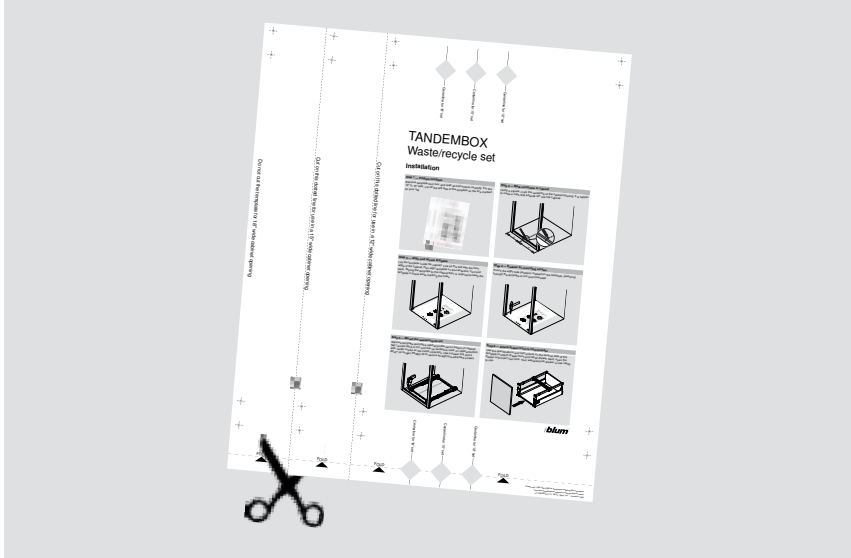


Step 2 — Mark centerline in cabinet

Using a framing square, mark centerline of cabinet opening. It is helpful to make a mark that extends 20" into cabinet.

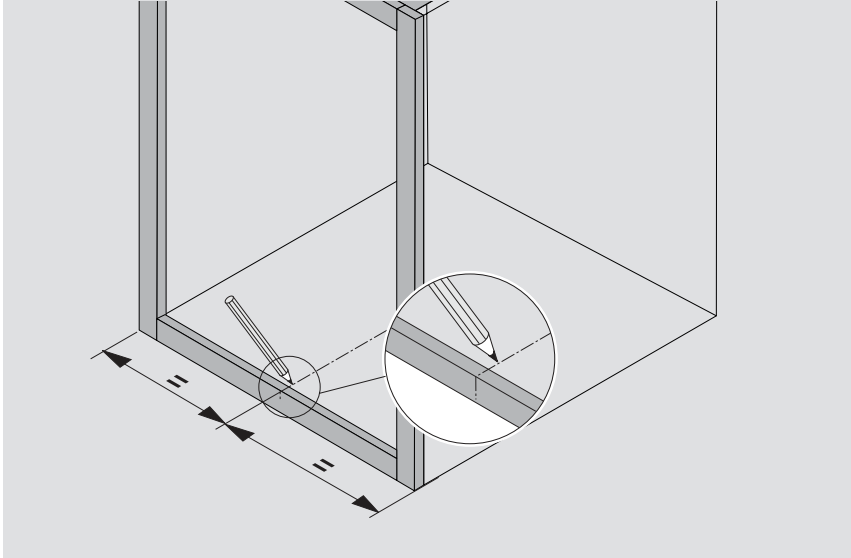


Step 3 — Align and secure template

Lay template inside cabinet. Line up fold with the front edge of the cabinet, then align template on the centerline, front and back. Taping template to the cabinet face and bottom is required to keep template in place while marking the holes.

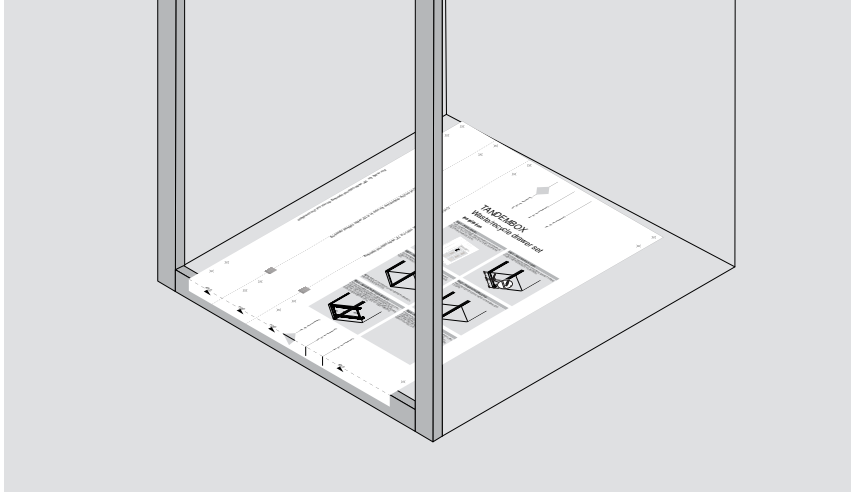


Step 4 — Mark mounting screw locations

Punch eight hole locations marked on the template, pre-boring through template is not recommended.

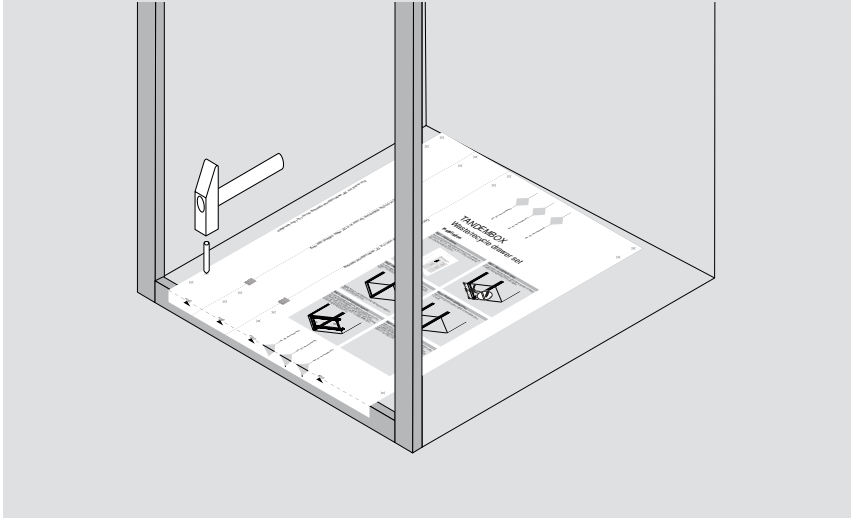


Step 5 — Mount the waste/recycle set

Remove template and place cabinet profile set on bottom of cabinet. Set runners back 4 mm and line up centerline mark on cabinet bottom with center marks on the metal crossrails. Use a power drill and a #2x2" (or longer) Phillips bit to secure all eight pre-attached screws.

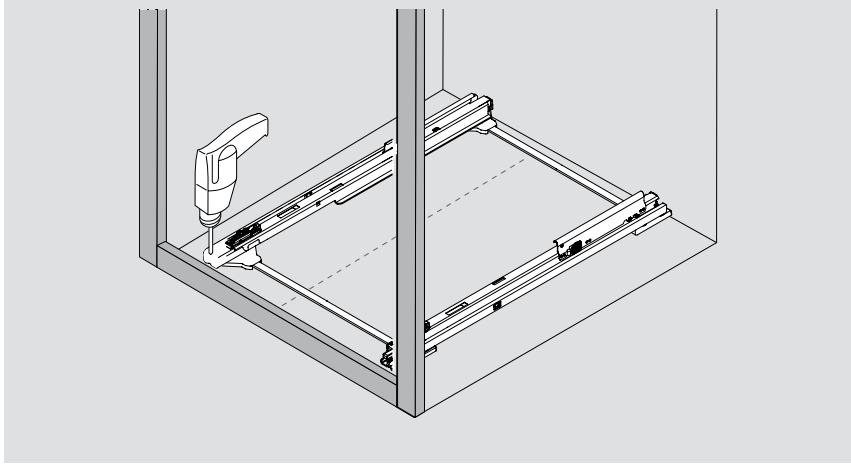

Step 6 — Attach drawer front to front bracket

Use the specifications and instructions on the reverse side of this template to attach drawer front and install drawer. Next, open the drawer and insert your bins. Your waste/recycle drawer is now ready to use.

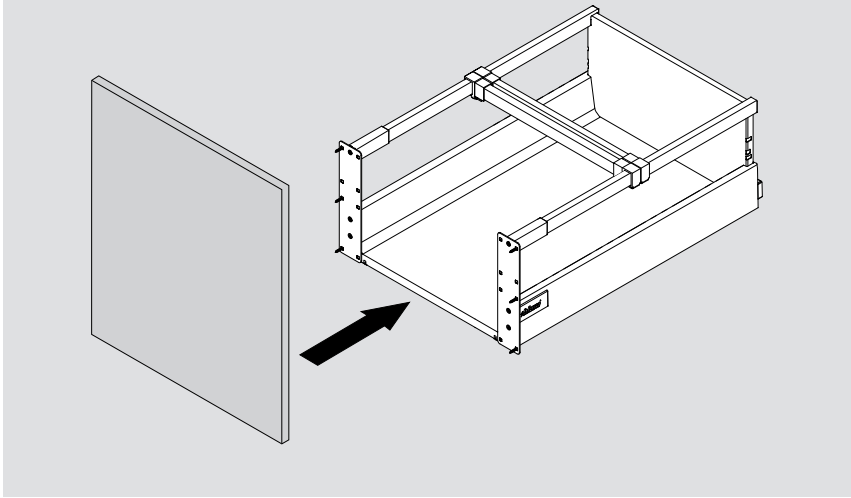

Please call 1-800-438-6788 for assistance installing Blum products.
Technical specifications subject to change without notice.
LIT.TBX5500.07.11 © 2011 Blum, Inc. Printed in USA



FOLD

FOLD

FOLD

FOLD

Centerline for 18" set

Centerline for 15" set

Centerline for 12" set

Drawer and cabinet specifications

Front view

NOTE: Minimum opening height = 233 (9-3/16")

Drawer front attachment

*15.5 (5/8") to 22 (7/8") depending on bottom recess

i Important

Bin width and height must be considered when designing your cabinet (see diagram to the left).

Minimum inside cabinet depth	
With SERVO-DRIVE	569 (22-3/8")
Without SERVO-DRIVE	553 (21-3/4")

Specification chart		
Waste/recycle set	Drawer length	Minimum cabinet opening width
356M55B7SAB	550 (21-5/8")	305 (12")
356M55B7SAD	550 (21-5/8")	381 (15")
356M55B7SAF	550 (21-5/8")	457 (18")

Drawer adjustments

Height adjustment

Use a Phillips screwdriver to adjust drawer front up or down as shown. Repeat on left side if necessary.

Side adjustment

Use a Phillips screwdriver to adjust drawer front left or right. Adjust left or right side equally by turning both toward or away from drawer front.

Tilt adjustment

Slide gallery cover towards drawer back. Rotate orange adjustment piece as shown and slide cover back towards drawer front. Repeat on left side if necessary.

Installation and removal

Installation

Removal

For more information about installing Blum products go to blum.com or call 1-800-438-6788 for customer service.
Technical specifications subject to change without notice.